



snackpoint

advanced

ERROR CODES

snackpoint

Error Codes

ERROR CODE MEANING

01	NUMBER SELECTION CODE	Motor blocked / spiral does not rotate
02	NUMBER SELECTION CODE	The spiral does not complete the rotation / time out of the HCB knob rotation (7 secs)
05	NUMBER SELECTION CODE	Motor disconnected
07	NUMBER SELECTION CODE	HCB pusher timeout (15 secs)
09	NUMBER SELECTION CODE	Possible microswitch defect or spiral motor wiring defect
10	(*) 38-39	Internal temperature feeler faulty
11	(*) 38 - 39	Evaporator probe faulty
16	(*) 33-38-39-117	Error communication with peripheral (electric panel hub board)
17	(*) 38 - 39	Communication break during sale cycle without credit collection
18	(*) 38 - 39	Communication break during cycle with credit collection
30	(*) 38 - 39	Fridge safety has intervened
31	(*) 38 - 39	Photocell test error
32	(*) 38 - 39	Photocell calibration error

snackpoint

Error Codes

ERROR CODE MEANING

33	(*) 38 - 39	
39	(*) 38 - 39	Photocell safety
51	(*) 38 - 39	Interruption of peripheral connection at the beginning of the sale cycle
55	/	Payment system out of service
61	NUMBER SELECTION CODE	Motor Blocked (the spiral does not rotate) SLAVE A
62	NUMBER SELECTION CODE	The spiral does not complete the rotation SLAVE A
65	NUMBER SELECTION CODE	Motor disconnected SLAVE A
69	NUMBER SELECTION CODE	Possible microswitch defect or spiral motor wiring defect SLAVE A
91	NUMBER SELECTION CODE	Selection not reset
93	/	Communication error between the machine and the Audit device

(*) KEY:

33 = PHOTOCELLS
38 = SPIRALS MASTER
39 = SPIRAL SLAVE
117 = HUB BOARD