




# Autovista

## HIGH PRESSURE BREWER PCB - ERROR CODES

## High Pressure Brewer PCB

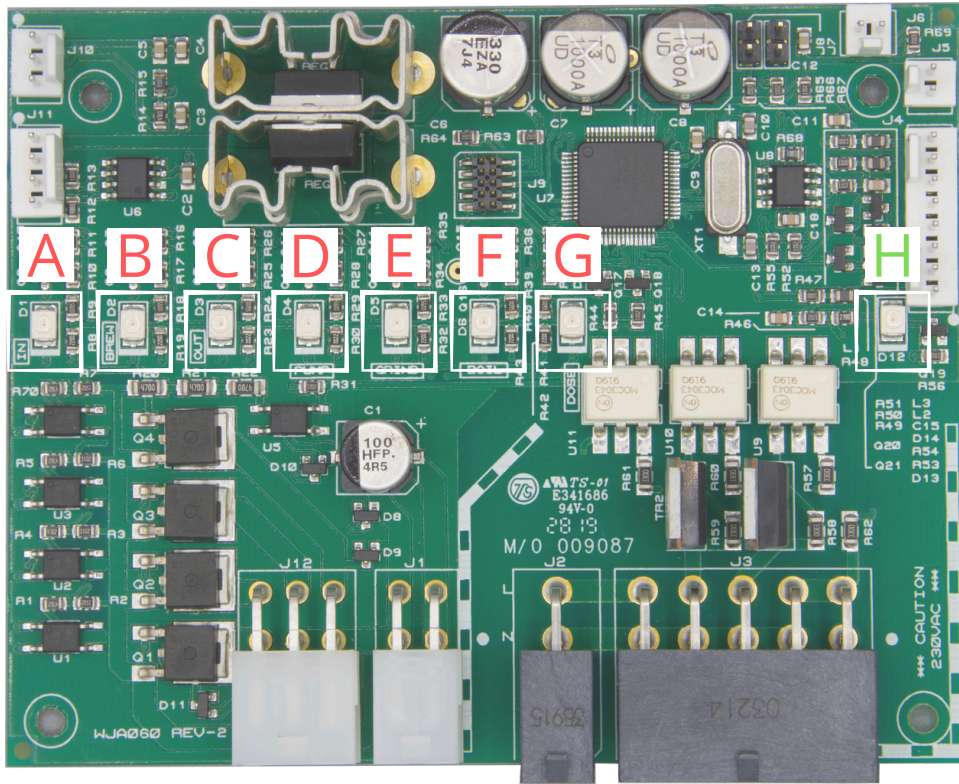

LED

LOCATION

**A**

WATER INLET VALVE OPEN

**B**

BREWER MOTOR RUNNING

**C**

HOT WATER OUTLET OPEN

**D**

WATER PUMP RUNNING

**E**

BEAN GRINDER RUNNING

**F**

BOILER HEATER ELEMENT ON

**G**

DOSER SOLENOID ACTIVATED

**H**

POWER / FAULT ACTIVATED

## Fault Codes:

GREEN LED FLASHING INDICATING A FAULT

No. FLASHES	FAULT	FAULT CODE
1	HEADER TANK PROBE WARNING	#46
2	HEADER TANK/BOILER FILL TIMEOUT	#43
3	NO HEATING	#44
4	HEAT TIME OUT	#44
5	DOSER TIME OUT (OUT OF BEANS)	#65 OR #66
6	DOSER FAILURE	#36 OR #37
7	BREWER FAILURE	#50 OR #52
8	PUMP FAILURE / SLOW FLOW	#34 OR #35
9	LOSS OF 24V SUPPLY	#62 OR #63
10	BOARD PCB OVER TEMPERATURE	#67 OR #68
11	TEMPERATURE SENSOR FAIL	#45
12	NO FLOW OF WATER	#32 OR #33
13	FLOW LEAK	#38
14	HEADER LEAK	#38
-	BREWER CHAMBER REMOVED	#41 OR #42